

AUTHORITY22[®]

Pattern Information

Date

Pattern Type

Pattern Difficulty

Pattern Designer

Pattern Parameters

Pattern Number

Pattern Name **DM Einzel 2018**

Mode Clean & Oil

Forward Speed Max Clean/Reduced

Start Cleaner Spray 0

Start Squeegee 0

Start Oiling

Split Pattern

Supplies Information

Lane Cleaner

Cleaner Mixture Ratio : 1

Cleaner Transition Distance

Lane Conditioner

Surface Information

Surface Type


Surface Brand

Age

Notes

	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
Zone End Distance	8	14	22	27	32	37	41	
Zone Ratio	L 2,6 : 1	3,7 : 1	3,4 : 1	3,6 : 1	3,6 : 1	3,7 : 1	1,0 : 1	### : 1
	R 2,6 : 1	3,7 : 1	3,4 : 1	3,6 : 1	3,6 : 1	3,6 : 1	1,0 : 1	### : 1

ZONE	7 Pin Side																	Board Number										10 Pin Side												
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	
1	32	32	32	32	32	32	39	49	65	75	80	83	85	88	90	90	90	90	90	90	90	90	90	90	88	85	83	80	75	65	49	39	32	32	32	32	32	32	32	
2	22	22	22	22	22	22	24	28	42	51	62	71	75	81	84	84	84	84	84	84	84	84	84	84	81	75	71	62	51	42	28	24	22	22	22	22	22	22	22	
3	18	18	18	18	18	18	20	22	24	34	44	53	55	59	63	63	63	63	63	63	63	63	63	63	59	55	53	44	34	24	22	20	18	18	18	18	18	18	18	
4	13	13	13	13	14	14	14	15	21	25	33	38	42	47	50	50	50	50	50	50	50	50	50	50	47	42	38	33	25	21	15	14	14	14	13	13	13	13	13	
5	9	9	9	9	9	9	9	11	14	16	18	19	21	23	27	29	31	31	33	33	33	33	33	33	31	28	26	25	23	19	16	11	9	9	9	9	9	9	9	
6	7	7	7	7	7	7	7	10	14	15	17	19	21	22	23	24	25	26	26	26	26	26	26	25	24	23	22	21	19	16	14	10	7	7	7	7	7	7	7	
7	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
8																																								

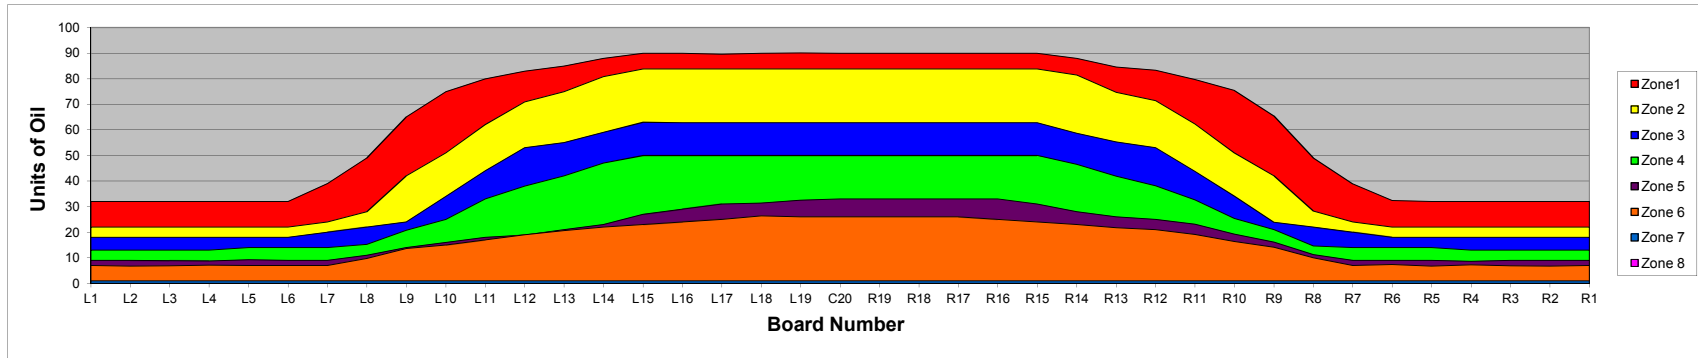

AUTHORITY22[®]

Crosswise Ratios

	Zone 1	Average	Ratio
3L-7L	Left =	33,4	2,6
3R-7R	Right=	33,5	2,6
18L-18R	Center =	90,0	

	Zone 2	Average	Ratio
3L-7L	Left =	22,4	3,7
3R-7R	Right=	22,4	3,7
18L-18R	Center=	83,8	

	Zone 3	Average	Ratio
3L-7L	Left =	18,4	3,4
3R-7R	Right=	18,4	3,4
18L-18R	Center=	62,8	

	Zone 4	Average	Ratio
3L-7L	Left =	13,6	3,6
3R-7R	Right=	13,6	3,6
18L-18R	Center =	50,0	

	Zone 5	Average	Ratio
3L-7L	Left =	9,0	3,6
3R-7R	Right=	8,9	3,6
18L-18R	Center=	32,6	

	Zone 6	Average	Ratio
3L-7L	Left =	7,0	3,7
3R-7R	Right=	7,1	3,6
18L-18R	Center=	26,1	

	Zone 7	Average	Ratio
3L-7L	Left =	1,0	1,0
3R-7R	Right=	1,0	1,0
18L-18R	Center =	1,0	

	Zone 8	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	#DIV/0!	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

Lengthwise Ratio By Area

3L-7L 18L-18R 3R-7R

DM Einzel 2018

	Left	Center	Right
Zone 2	1,4	1,0	1,4
Zone 3	1,8	1,4	1,8
Zone 4	2,4	1,8	2,4
Zone 5	3,7	2,7	3,7
Zone 6	4,7	3,4	4,7
Zone 7	33,4	90,0	33,4
Zone 8	#DIV/0!	#DIV/0!	#DIV/0!

AUTHORITY22[®]

Lengthwise Ratio By Board

Zone	7 Pin Side													Board Number										10 Pin Side																		
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1			
2	1,5	1,5	1,5	1,5	1,5	1,5	1,6	1,8	1,5	1,5	1,3	1,2	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,2	1,3	1,5	1,6	1,7	1,6	1,5	1,5	1,5	1,5	1,5	1,5				
3	1,8	1,8	1,8	1,8	1,8	1,8	2,0	2,2	2,7	2,2	1,8	1,6	1,5	1,5	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,5	1,5	1,6	1,8	2,2	2,7	2,2	1,9	1,8	1,8	1,8	1,8	1,8	1,8			
4	2,5	2,5	2,5	2,5	2,3	2,3	2,8	3,2	3,1	3,0	2,4	2,2	2,0	1,9	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,8	1,9	2,0	2,2	2,4	3,0	3,1	3,4	2,8	2,3	2,3	2,5	2,5	2,5	2,5			
5	3,6	3,6	3,6	3,7	3,4	3,6	4,3	4,5	4,6	4,7	4,4	4,4	4,0	3,8	3,3	3,1	2,9	2,9	2,8	2,7	2,7	2,7	2,7	2,7	2,9	3,1	3,3	3,3	3,4	3,9	4,0	4,4	4,3	3,6	3,6	3,7	3,6	3,6	3,6			
6	4,6	4,7	4,6	4,5	4,6	4,6	5,6	5,0	4,7	5,0	4,7	4,4	4,1	4,0	3,9	3,8	3,6	3,4	3,5	3,5	3,5	3,5	3,5	3,6	3,8	3,8	3,9	4,0	4,1	4,6	4,6	4,9	5,6	4,4	4,7	4,4	4,6	4,7	4,6			
7	32,0	32,0	32,0	32,0	32,0	32,0	39,0	49,0	65,0	75,0	80,0	83,0	85,0	88,0	90,0	90,0	89,6	90,0	90,1	90,0	90,0	90,0	90,0	90,0	90,0	88,0	84,5	83,3	79,7	75,5	65,4	49,0	38,9	32,4	32,0	32,0	32,0	32,0	32,0			
8	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####	####

The lengthwise ratios are calculated from the volumes in the first zone.